



MODERNIZATION KITS

Kwikset

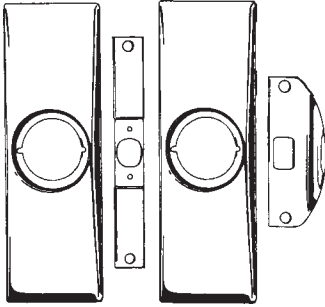


KW-214 CP US-3
Large Modernization Kit. 3-1/2" x 10-1/2". Includes: 2 large trim plates, latch & strike plate.

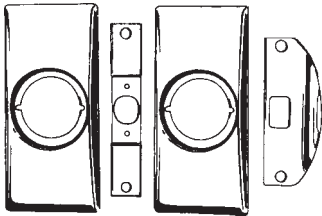

KW-215 CP US-3
Small Modernization Kit. 7-1/4" x 3-3/8". Includes: 2 small trim plates, (KW-249 below) latch & strike plate.

AMES

DEADBOLTS & KNOB LOCKS FIRMLY ANCHORED IN HOLLOW METAL DOORS USING THE AMES DOOR & LOCK SUPPORTS

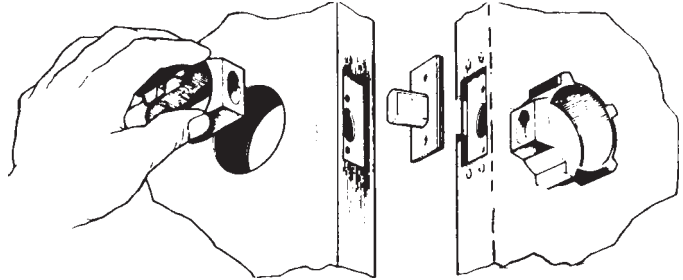

Stock No. Description
ADLS For 1-3/4" doors

BOLT CONE holds and centers deadbolt or latch bolt — eliminates bolt wobble and loose or broken faceplates screws.

LOCK SUPPORT serves as dust cover to maintain clean, free working lock.

BOLT CONE & PERIMETER LUGS support door when lock is securely tightened on door.

DEADBOLTS which can be used in 2-1/8" holes: Schlage B600 Series, Corbin/Russwin, Kwikset, Arrow, Sargent, Weslock, Schlage 400 Series, and Master with mounting plates.

FACE PLATE BRACKET installed by locksmith. Not used with drive-in bolt.

SIMPLE INSTALLATION. Fold & insert into 2-1/8" hole. PATIENT applied for.



We offer specialized keying services:
Master Keying
Keying Alike
Construction Keying
and more.